


Flowers and Stars Pattern Perfect Template Installation

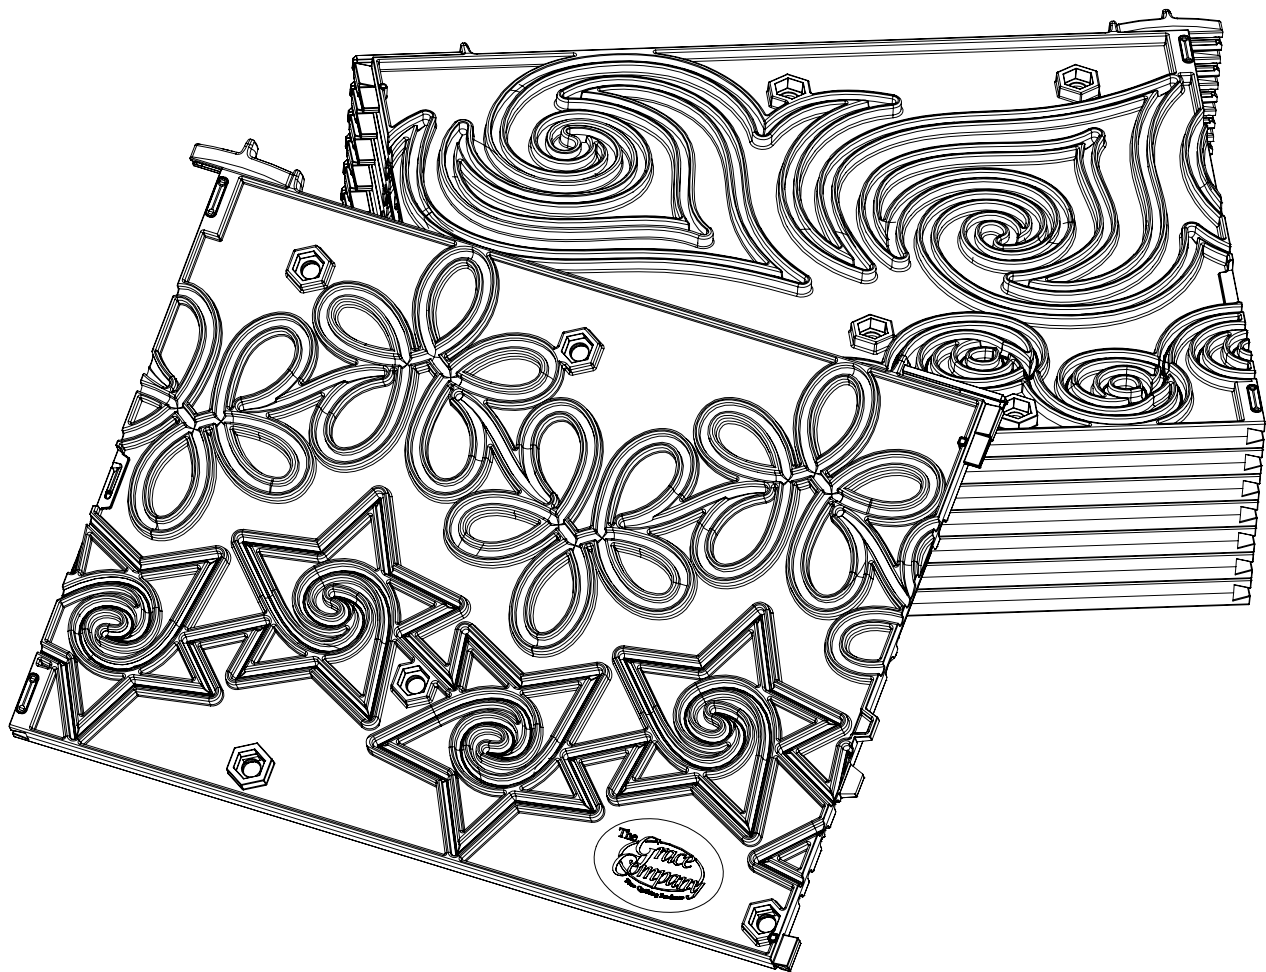


Copyright July 18, 2019
Grace Company
(Reproduction Prohibited)
Version 1.0


MADE BY
Grace

Pattern Perfect – Flowers and Stars


Parts Needed:

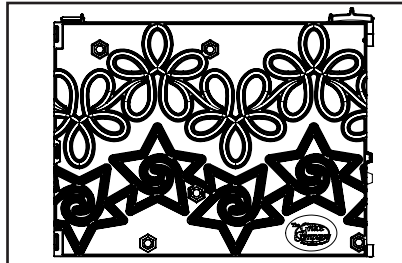


**Flowers and Stars
Pattern Perfect
Template (10)**

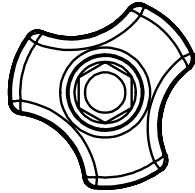


3-Wing Plastic Knob (3)



**M6 X 40 mm
Hex Bolt (3)**

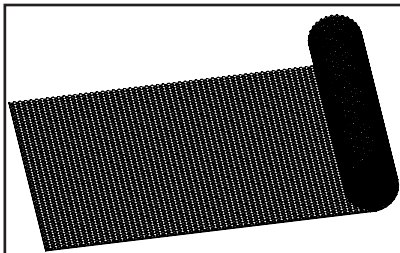


Non-skid Mat (1)

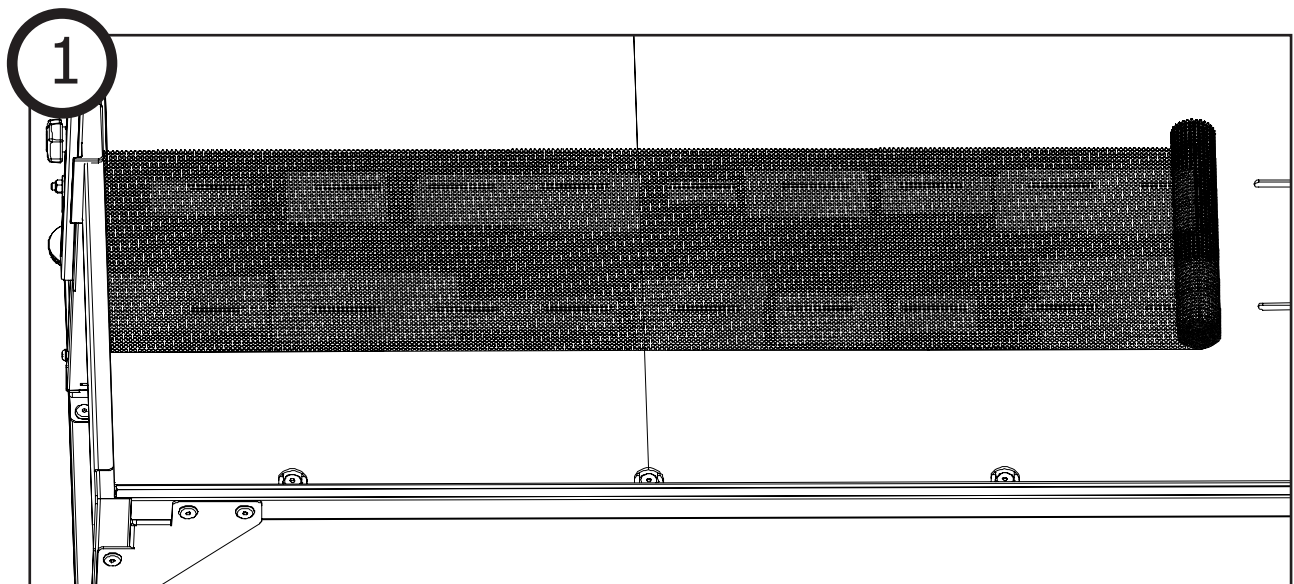


Lay down the non-skid mat on the table top, making sure there are no wrinkles.


Pattern Perfect – Flowers and Stars

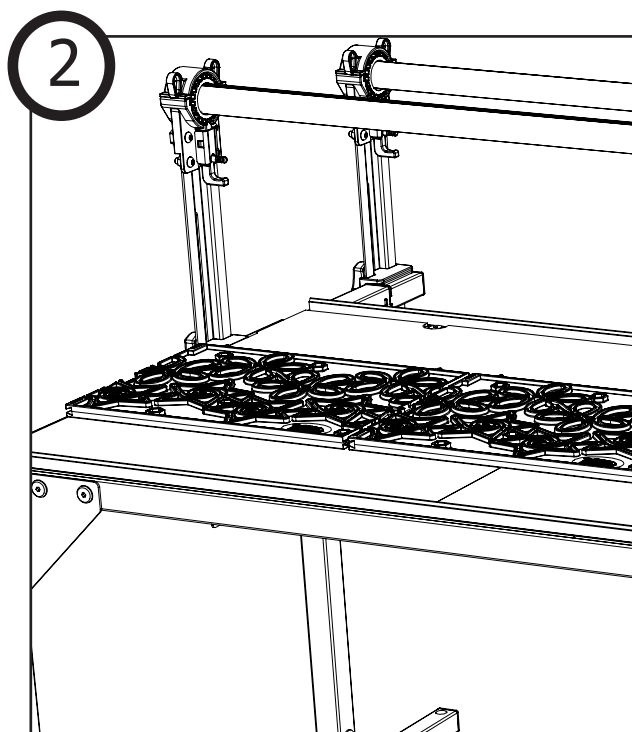


Determine which pattern set to use. Place the templates on the non-skid mat with the selected pattern face up.

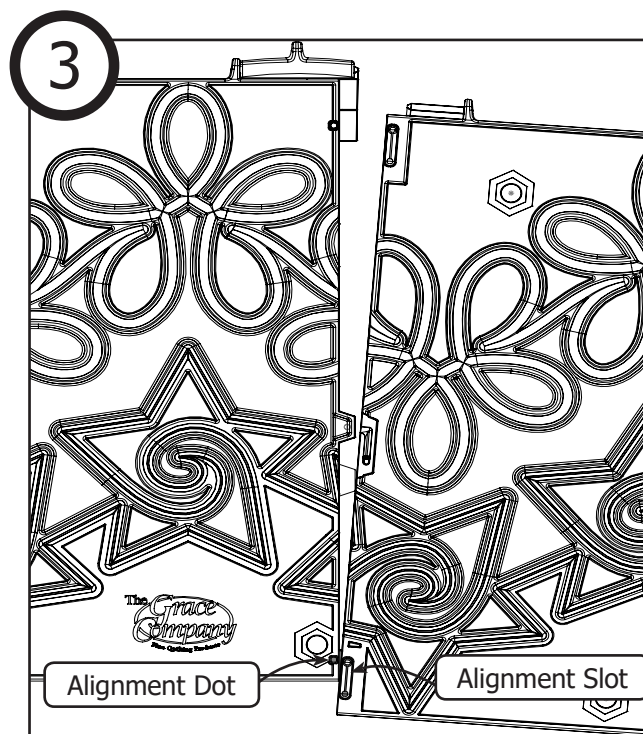

Starting at the bottom of the templates, match the alignment dot with the top of the alignment slot.

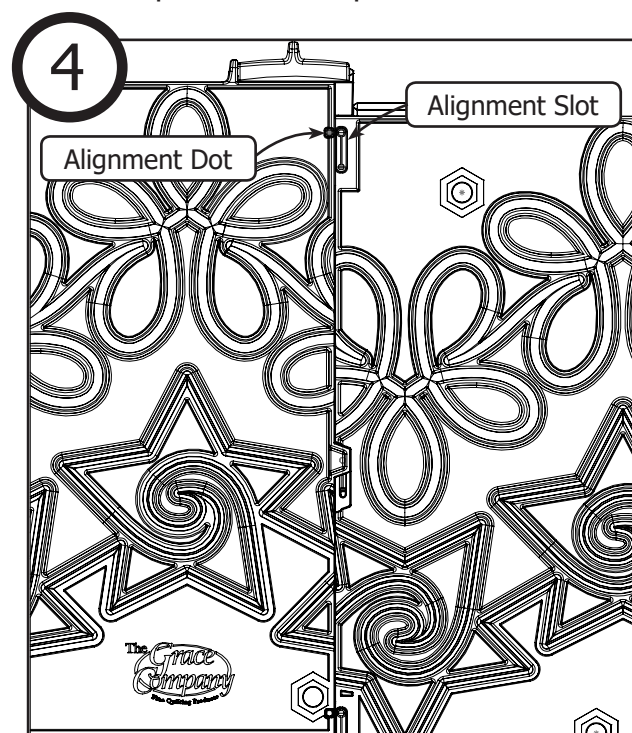


Bring the template tops together. Ensure that the alignment dot at the top of the template lines up with the top of the alignment slot.

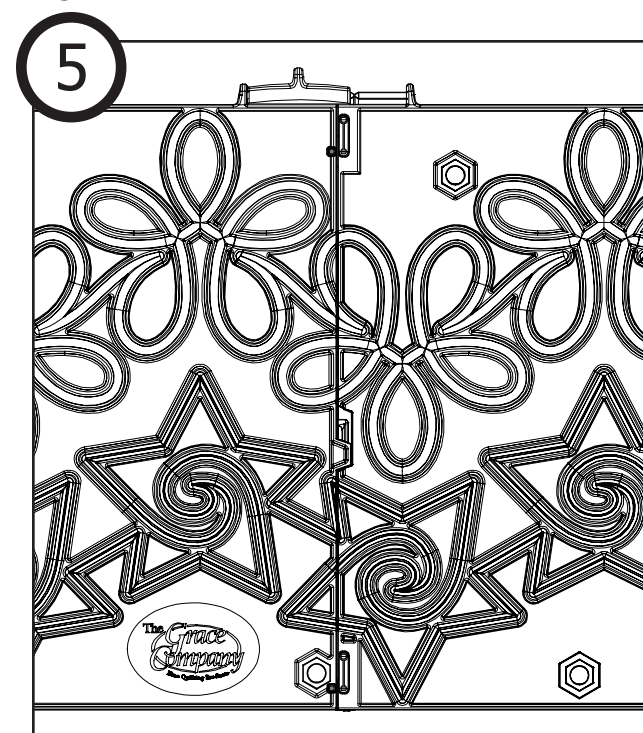


Slide the lower template up until both alignment dots reach the bottom of the alignment slots.


Pattern Perfect – Flowers and Stars

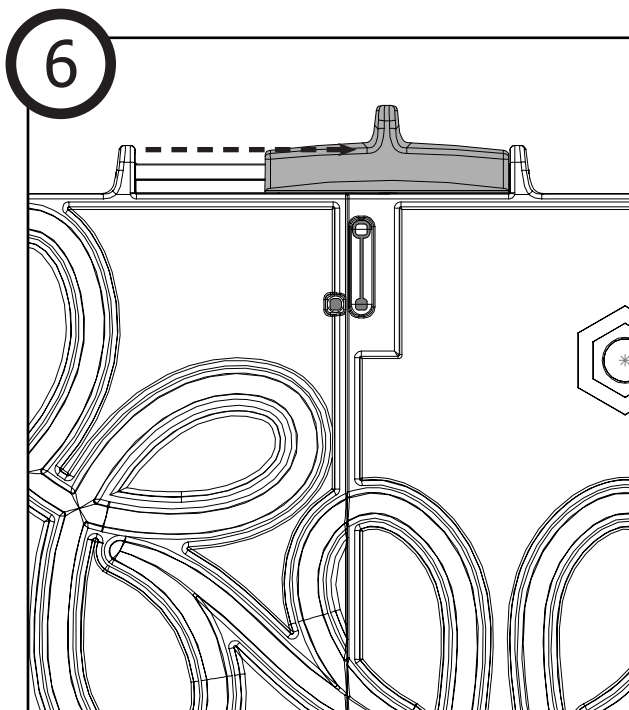

Slide the lock over both templates. Repeat steps 3–6 for all templates on the table.

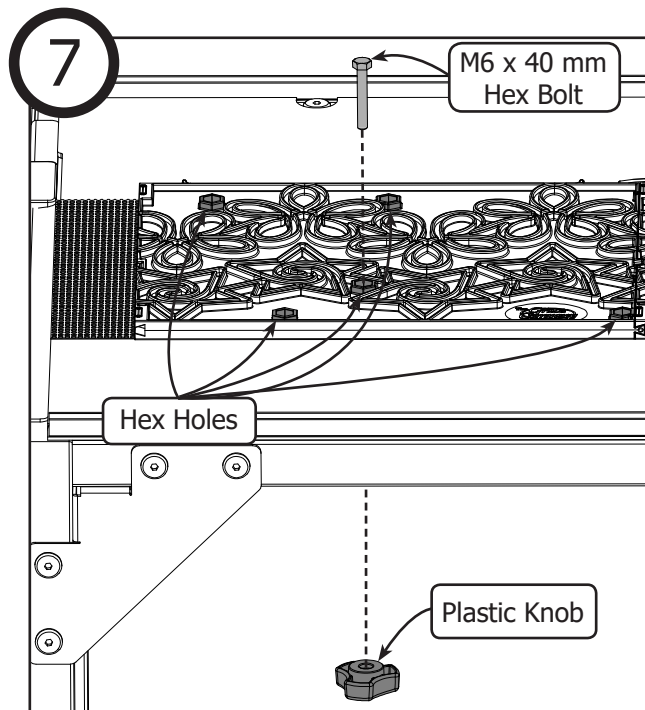

In the far left template, line up a hex hole with one of the slots in the frame's table. Put an M6 x 40 mm hex bolt through the hole in the template and push it through the non-skid mat. Screw a 3-wing plastic knob onto the hex bolt until hand tight.

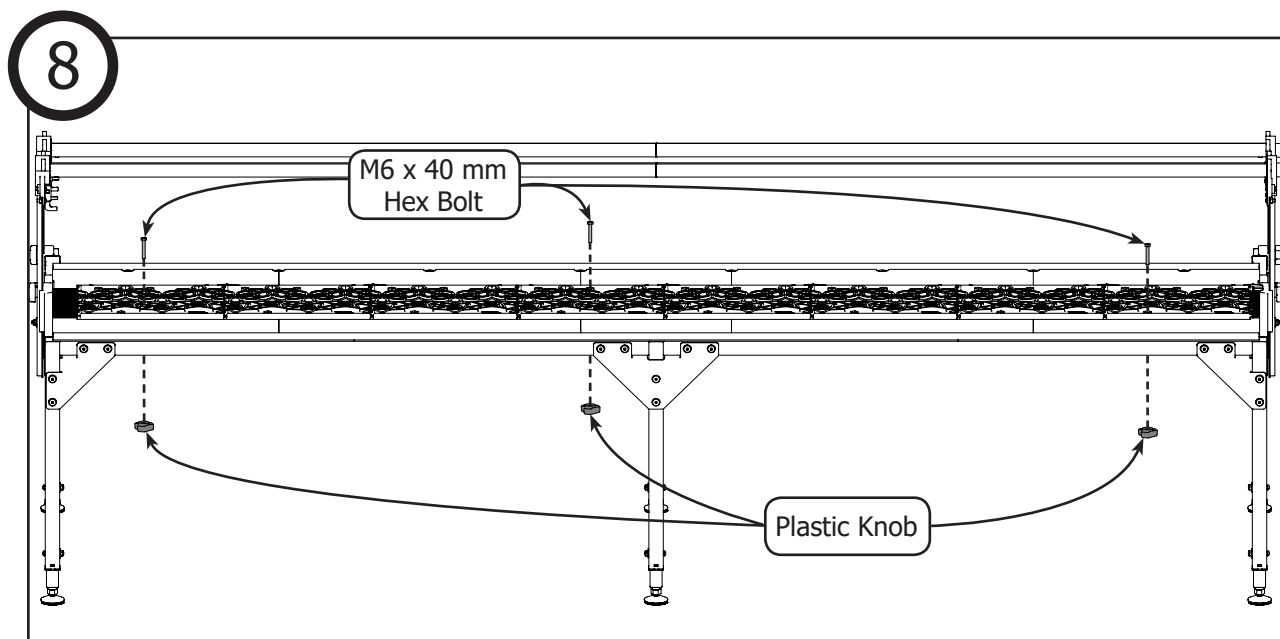

Repeat step 7 in the center and far right templates. **Note:** Not every template needs a hex bolt.

The Grace Company
2225 South 3200 West
Salt Lake City, UT 84119
Phone: 1-800-264-0644
Fax: 801-908-8888
www.graceframe.com